



US

## CZ 550 - INSTRUCTION MANUAL AND MAINTENANCE PROCEDURES

- |                               |                                 |  |  |
|-------------------------------|---------------------------------|--|--|
| 1 Barrel                      | 30 Plunger Pin                  | 58 Adjusting Screw (B)                     | 85 Magazine Box Spring   |
| 2 Rear Sight                  | 31 Safety                       | 59 Spring, Trigger Pull                    | 86 Magazine Follower   |
| 3 Front Sight                 | 32 Safety Pawl                  | 60 Adjusting Screw, Trigger Pull (A)       | 87 Front Spacer  |
| 4 Front Sight Base            | 33 Safety Pawl Spring           | 61 Locking Nut                             | 88 Frame Screw, Front  |
| 5 Front Sight Base Screw 05   | 34 Roller                       | 62 Adjusting Screw, Trigger Overtravel (C) | 89 Rear Spacer   |
| 6 Front Sight Base Screw 03   | 35 Safety Pawl Pin              | 63 Locking Nut                             | 90 Frame Screw, Rear   |
| 7 Rear Sight Base Screw       | 36 Sear                         | 64 Nylon Pin (2x)                          | 106 Trigger Spring   |
| 8 Front Sight Detent          | 37 Sear Stop                    | 65 Trigger Mechanism                       | <i>The following parts relate to the detachable magazine version</i> |
| 9 Detent Spring               | 38 Sear Spring                  | 66 Screw                                   | 91 Trigger Guard - Magazine Version                                  |
| 10 Pin, Front Sight Detent    | 39 Sear Pin                     | 67 Spring Washer                           | 92 Magazine Latch  |
| 11 Front Sight Cover          | 40 Bolt Stop                    | 68 Stock                                   | 93 Magazine Latch Spring   |
| 12 Receiver                   | 41 Bolt Stop Spring             | 69 Butt Plate Spacer                       | 94 Magazine Latch Pin  |
| 13 Bolt                       | 42 Safety Pin                   | 70 Butt Plate                              | 95 Magazine Catch  |
| 14 Bolt Handle Knob           | 43 Retaining Plate              | 71 Screw, Butt Plate                       | 96 Magazine Catch Spring   |
| 15 Extractor                  | 44 Ejector                      | 72 Butt Plate Plug                         | 97 Magazine Catch Pin  |
| 16 Extractor Collar           | 45 Ejector Pin                  | 73 Swivel Wood Screw                       | 98 Magazine Shell  |
| 17 Firing Pin                 | 46 Ejector Spring               | 74 Sling Swivel                            | 99 Magazine Floor Plate  |
| 18 Firing Pin Spring          | 47 Ball                         | 75 Swivel Screw                            | 100 Floor Plate Lock   |
| 19 Support, Firing Pin Spring | 48 Trigger Housing              | 76 Swivel Screw Washer                     | 101 Magazine Spring  |
| 20 Nut, Firing Pin Spring     | 49 Trigger                      | 77 Swivel Assembly                         | 102 Follower   |
| 21 Cocking Piece              | 50 Trigger Lever                | 78 Trigger Guard - Box Version             | 103 Magazine Ejector   |
| 22 Pin, Firing Pin Nut        | 51 Trigger Lever Pin            | 79 Box Shell                               | 104 Magazine Ejector Spring  |
| 23 Cap                        | 52 -                            | 80 Floor Plate                             | 105 Magazine Ejector Pin   |
| 24 Bolt Sleeve                | 53 Adjusting Screw, Set Trigger | 81 Floor Plate Pin                         |  |
| 25 Disassy Catch              | 54 Set Trigger Lever            | 82 Floor Plate Latch                       |  |
| 26 Disassy Catch Spring       | 55 Spring, Set Trigger Lever    | 83 Spring, Floor Plate Latch               |  |
| 27 Disassy Catch Pin          | 56 Pin                          | 84 Pin, Floor Plate Latch                  |  |
| 28 Disassy Catch Plunger      | 57 Retaining Ring               |  |  |
| 29 Plunger Spring             |                                 |  |  |